


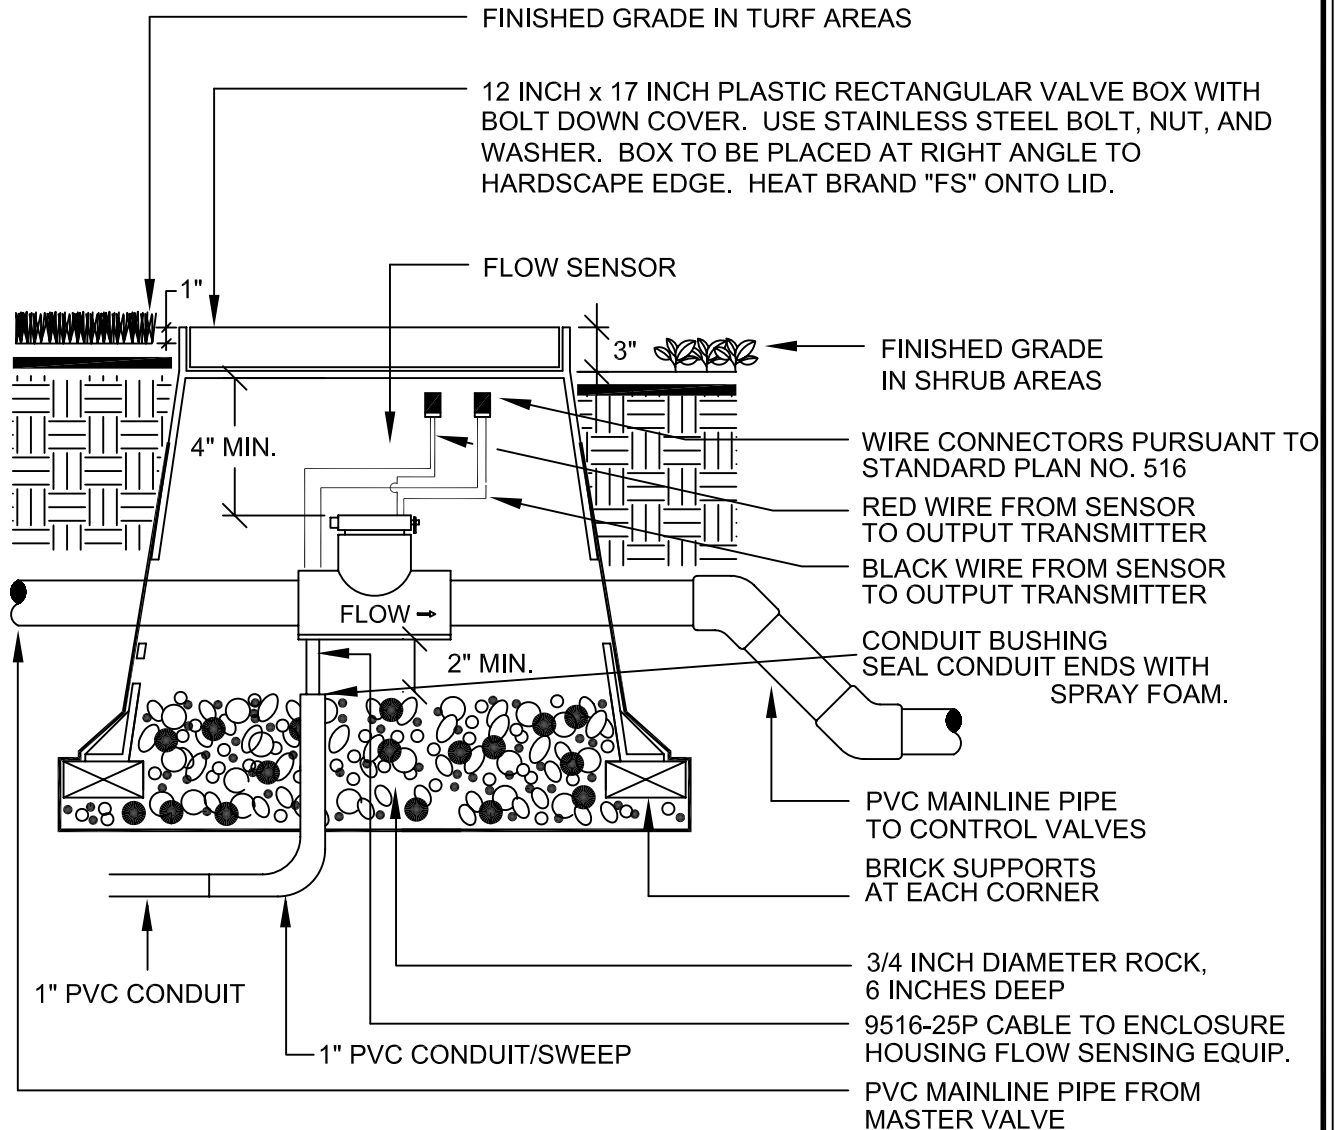

NOTE:

INSTALL FLOW SENSOR PURSUANT TO THE MANUFACTURER'S RECOMMENDATIONS AND WIRE TRANSMITTER TO THE IRRIGATION CONTROLLER.

THE MAINLINE PIPE SHALL NOT CHANGE SIZE OR DIRECTION CLOSER THAN 5 FEET UPSTREAM OR 3 FEET DOWNSTREAM OF THE FLOW SENSOR.

USE 45 DEGREE ELLS TO ACHIEVE MAINLINE DEPTH ON THE DOWNSTREAM SIDE OF THE FLOW SENSOR.

WRAP LANDSCAPE FABRIC AROUND SIDES AND BOTTOM OF BOX TO COVER ALL OPENINGS.

© Copyright 2000 Global Digi-tech, LLC - The pictorial and graphic expressions displayed with this work are copyrighted under the laws of the United States and shall be used only on projects under the jurisdiction of the agency listed below.

REVISIONS	CITY OF IRVINE	STANDARD PLAN NO.
	FLOW SENSOR	509
	<i>Mark L. Carroll</i>	
	Approved by: Mark L. Carroll R.C.E. 31515 City Engineer	Date 6-22-09
		Sheet 1 of 1